


Remote control pairing procedure

Power the driver to pair an additional remote control to it. At this point, press the key indicated by the red arrow twice in rapid succession (less than a second).

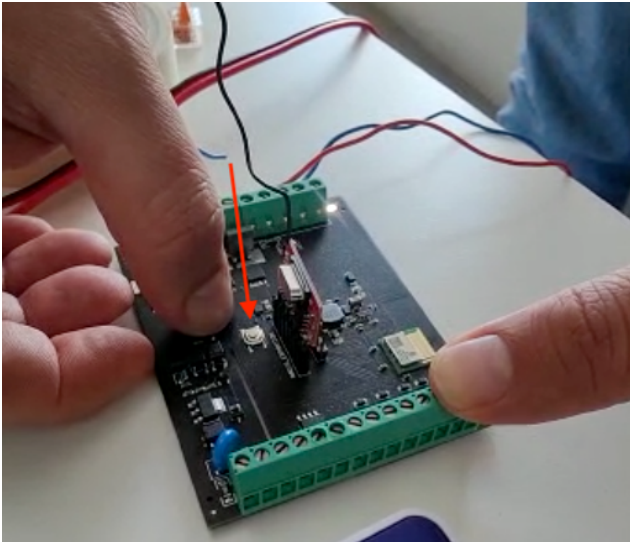

The signaling LED on the receiver (see arrow) begins to emit 3 flashes in rapid succession and then pauses and repeats the 3 flashes. The receiver is then in learning mode. Attention! Make sure that the number of flashes is 3!

Press and hold any button on the remote control for at least 3 seconds. The signaling LED of the receiver stops flashing and stays on as long as the radio control button is held down.

The new remote is paired. It is possible to pair up to 10 remote controls to a single receiver.

